 



Basic parameters

See chart for the fuse of basic parameters

□ Type	Rated Voltage(KV)	Rated current(A)	Rated brake current(KA)
XRNP1-□/□-□-1	7.2(3.6) 12	0.2,0.3,0.5,1,2,3,15	50
XRNP1-□/□-□-1	24	0.2,0.3,0.5,1,2,3,15	50
XRNP1-□/□-□-2	12	2,3,15	50
XRNP6-□/□-□-1	40.5	0.2,0.3,0.5,1,2,3,15	31.5
XRNP6-□/□-□-3		0.2,0.3,0.5,1,2,3,15,4,5	
XRNP6-□/□-□-4		0.2,0.5,1,2,3,15,6,3	
XRNP6-□/□-□-3		0.2,0.3,0.5,1,2,3,15,4,5	
XRNP6-□/□-□-4		0.2,0.5,1,2,3,15,6,3	




 a) 熔断件

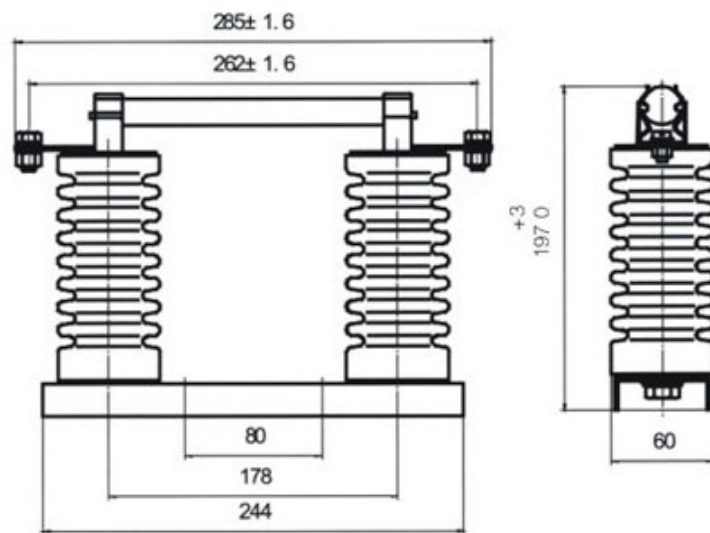


b) 熔断器

 图1 XRNP1-12/□-50-1



 a) 熔断件

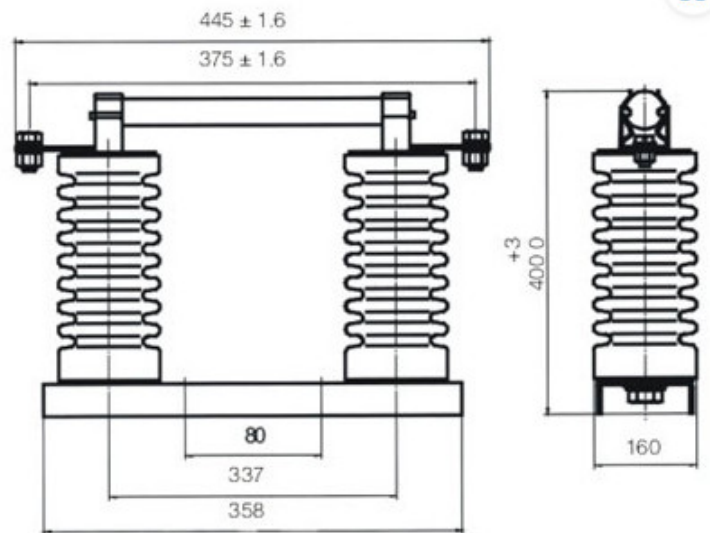

b) 熔断器

图2 XRNP1-24/□-50-1